

Alcatel A100L Repair Kit NS

1.		Bearing	2 pcs
2.		Bearing	2 pcs
3.		Motor Sleeve	1 pc
4.		Shaft Sleeve	2 pcs
5.		Seal	2 pcs
6.		Bearing Adapter	2 pcs
7.		Washer	2 pcs
8.		O-ring Set	1 pc