

Alcatel ACP15 Repair Kit

1.		Bearing	2 pcs
2.		Bearing	2 pcs
3.		Shaft Sleeve	2 pcs
4.		Sight	1 pc
5.		Motor Sleeve	1 pc
6.		Seal	2 pcs
7.		O-ring Set	1 pc