

Alcatel ACP28/40 Repair Kit

1. 	Bearing	1 pc	2. 	Bearing	2 pcs
3. 	Bearing	1 pc	4. 	Bearing	1 pc
5. 	Seal	1 pc	6. 	Seal	1 pc
7. 	Seal	2 pcs	8. 	Sleeve	1 pc
9. 	Sleeve	1 pc	10. 	O-ring Set	1 pc