

Alcatel ADP122 Repair Kit

1. 		Bearing	2. 		Bearing
		2 pcs			2 pcs
3. 		Seal	4. 		Seal
		2 pcs			2 pcs
5. 		Cap Seal	6. 		Cap Seal
		1 pc			1 pc
7. 		Spring	8. 		Washer
		1 pc			4 pcs
9. 		Shim Washer	10. 		Shaft Key
		2 pcs			2 pcs
11. 		Sight Glass	12. 		Socket Cap
		1 pc			1 pc
13. 		O-ring Set			
		1 pc			